

ČÍSLO	SOUŘADNICE X	SOUŘADNICE Y
51	- 684243900,0000	- 1163634540,0000
52	- 684245334,8854	- 1163633525,9258
53	- 684245930,0000	- 1163638040,0000
54	- 684247521,1759	- 1163637295,3922
55	- 684247360,0000	- 1163641960,0000
56	- 684249065,8070	- 1163641529,6258
57	- 684247910,0000	- 1163645740,0000
58	- 684249648,8293	- 1163645536,5788
59	- 684253087,4796	- 1163684321,8111
60	- 684253878,3449	- 1163685442,1422
61	- 684254907,5238	- 1163686390,7971
62	- 684257563,2017	- 1163687638,0153
63	- 684258780,0000	- 1163688100,0000
64	- 684257213,2505	- 1163689123,6929
65	- 684255439,8505	- 1163688337,3311
66	- 684254045,6732	- 1163687636,4004
67	- 684253105,4148	- 1163686769,7088
68	- 684252982,7360	- 1163689427,7493
69	- 684252706,0924	- 1163690949,2892
70	- 684250980,0000	- 1163690660,0000
71	- 684251240,0000	- 1163689230,0000
72	- 684251420,0000	- 1163685330,0000
73	- 684234825,4284	- 1163618108,6617
74	- 684231424,7983	- 1163617478,7177
75	- 684230168,0505	- 1163615363,6231
76	- 684222805,5796	- 1163619209,0920
77	- 684223400,0000	- 1163618860,0000
78	- 684222419,2068	- 1163618251,2502
79	- 684226556,8919	- 1163589778,3795
80	- 684228538,8876	- 1163590020,2705
81	- 684228887,2113	- 1163590062,7814
82	- 684229096,8038	- 1163586131,0750
83	- 684230770,0000	- 1163581230,0000
84	- 684234300,0000	- 1163558200,0000
85	- 684233622,9149	- 1163558001,7708
86	- 684234486,2348	- 1163557394,8509
87	- 684235169,0958	- 1163554442,6374
88	- 684235890,0000	- 1163554540,0000
89	- 684235576,4196	- 1163552681,6544
90	- 684237860,0000	- 1163551990,0000
91	- 684238619,2905	- 1163543692,7147
92	- 684240418,9728	- 1163544301,9302
93	- 684242218,6552	- 1163544911,1457
94	- 684241573,6228	- 1163546816,6346
95	- 684243413,1959	- 1163547439,3536
96	- 684244087,9104	- 1163549260,4985
97	- 684242318,7495	- 1163549912,4045
98	- 684239720,0000	- 1163550870,0000
99	- 684245806,3170	- 1163548623,8474
100	- 684246464,5836	- 1163550400,5972

Pozn.: Hodnoty vytyčovacích bodů jsou v mm